

Firmware update instruction

Note: All the files will be deleted during the update, please copy the important files to computer before update.


Cautions: Please operate strictly according to the following steps, the update failed & computer connection failed that caused by breaking the steps might have to return the unit back to factory for repair.

一、Dispel the old program


1. Download the latest firmware update tool from download center of the web-site: <http://www.degen.com.cn>, click the download link to save to computer.
2. Connect the unit to computer, open the update tool file "V0.1.8", find the "消除.upd" and copy it to the move disk of the unit.
3. Interrupt the connection
4. Turn on the unit, select "Menu→System→Firmware update→Main contents," open the "Main contents " to find the "消除.upd " , press the <Menu> button to dispel the old programs, there will be "success tips" appear after dispelling.

二、Update new program

1. Take out batteries, press the "Reset " button to reset the unit.
2. Open the update tool file "V0.1.8" in your PC, find and open the "burn_tool " to operate the "BurnTool.exe" program, then the update interface will appear on the computer display.

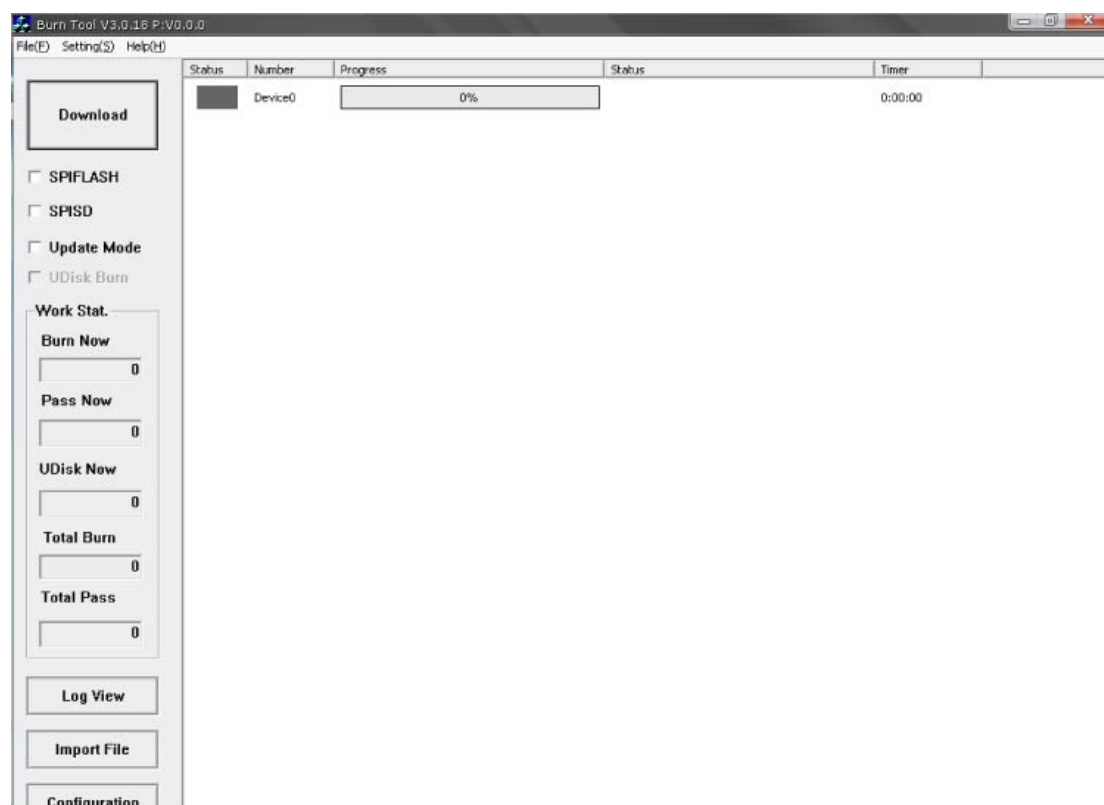

3. Click the file--"input file "on the update interface; input the update file "V0.1.8.upd" there will be "success tips" appear after input.
4. Connect the unit to computer, the status of update in update interface shows yellow, the location shows as bellow, which indicate connect to computer successfully.
5. Click "start download", the status and progress bar of the update tool become blue, when the progress bar is full, the status and progress bar of the update tool become green, which indicate update successfully.

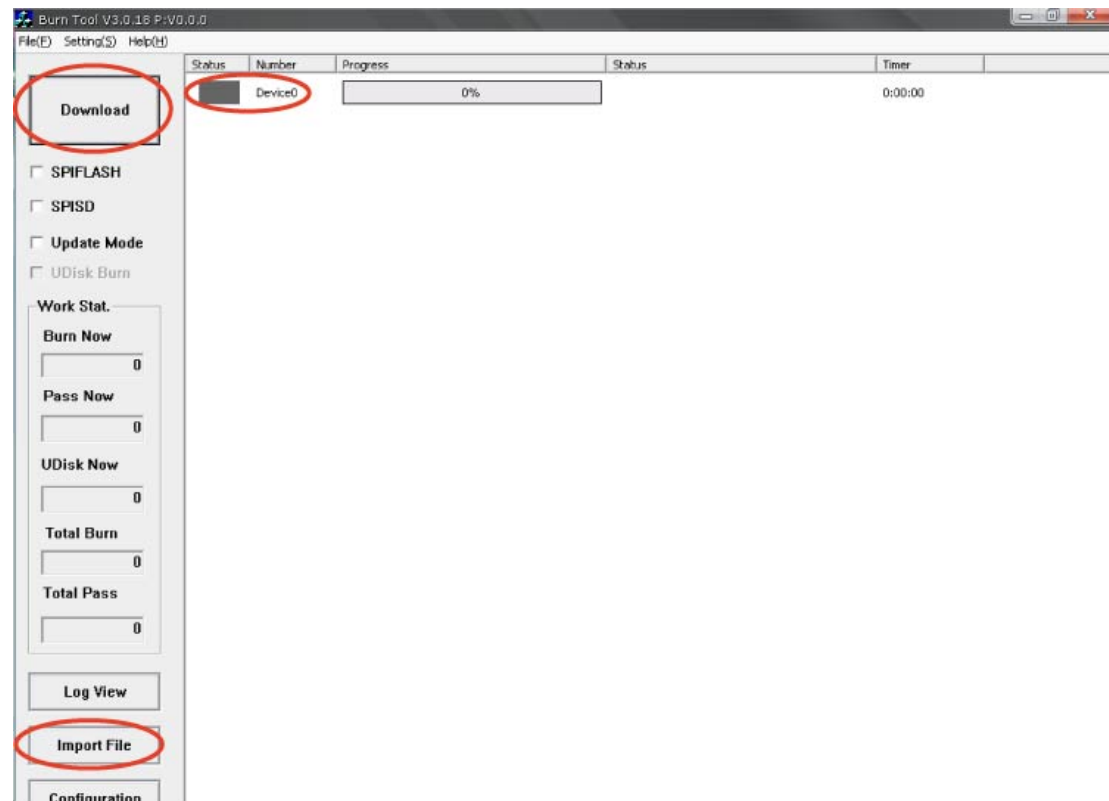

6. Close the update interface, interrupt the connection of computer.
7. The unit updates automatically and can be used after installing batteries.